 


THANKS FOR USING

POWERED SPEAKER SYSTEM

USER'S MANUAL

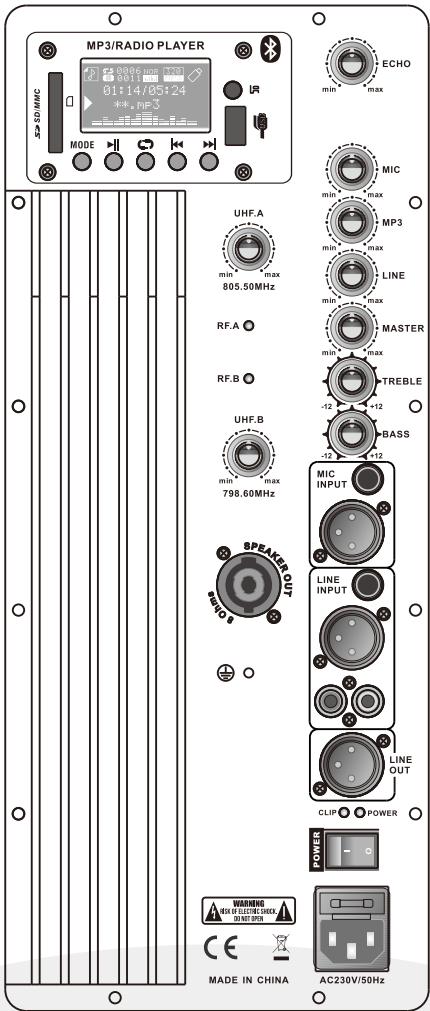

Before using your new 1000W Mp3 player speaker box with amplifier, please read this instruction manual to prevent any damage. Put it away in a safe for future references.

FEATURES

- Independent master volume for each input,treble and bass tones stting
- Polarized input plug.
- Balance and non-balanced microphone inputs.
- Two different connectors for each microphone input:6.3mm female and Cannon.
- Two RCA and one Cannon input jacks as auxiliary.
- 6.3mm female connector for output line,allowing you to connect more than one amplifier,offering a sound system according your needs.
- In-use and overload indicator.
- Power cord included in the package.

SPECIFICATION

Input:115/230V 50-60Hz 450W
Power output:1000W MUSIC (2000W P.M.P.O)
Remote control:
Input:3V---

Model Specifications	12"	15"
Configuration	2-Way	2-Way
Frequency Range (-10dB)	40-18,000Hz	40-18,000Hz
Power Capacity (Continous Pink Noise)	400W rms	400W rms
Nominal Impedance	8 ohm	8 ohm
Sensitivity (1W / 1m)	96 dB	97dB
Crossover Frequency	2,500 Hz	2,500 Hz
Connectors	XLR JACK RCA SPEAKON	XLR JACK RCA SPEAKON

IMPORTANT

- Avoid exposing the loudspeaker to moisture.
- If they are set up outdoors, be sure they are under cover.
- Warranty is void if you open the case.
- If you open the case, you may cause malfunctions to it.
- In case you require a revision of the equipment, please contact an authorized dealer.
- Do not use or store the equipment near wet places. May cause malfunction or shock hazard.
- Avoid exposure to extreme cold. If you must operate the loudspeakers in a cold environment, warm up the voice coils slowly by sending a low-level signal through them for about 15 minutes.
- Clean only with a soft, dry cloth.
- If the power cord is broken, it must be replaced by the manufacturer or service agent or qualified personnel to avoid risks.


The power speaker is designed to sit on the floor, a tabletop, or to fit on a standard tripod speaker stand.

Some recommendations are:

- Avoid placing the speaker in the corner of a room. This increases the low frequency output and can cause the sound to be muddy and indistinct.
- Avoid placing the speaker against a wall. This, too, increases the low frequency output, though not as much as corner placement. However, if you do need to reinforce the low frequencies, this is a good way to do it.


Product design and specification are subject to change without previous notice.

POWER CONTROL

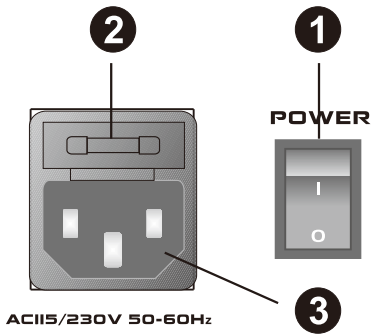


- 1.-On/off power switch
- 2.-Fuse
- 3.-AC power
Use it to connect the AC power cord.

REMOTE CONTROL

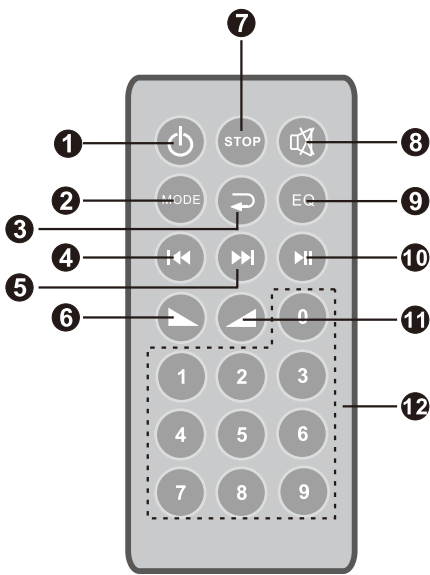


- 1.-Power on / off
- 2.-Change the audio input
- 3.-Repeat
- 4.-Backward
- 5.-Forward
- 6.-Volume +
- 7.-Stop
- 8.-Mute
- 9.-EQ
- 10.-Play / Pause
- 11. Volume -
- 12.-Selected song keyboard

CONTROL PANEL

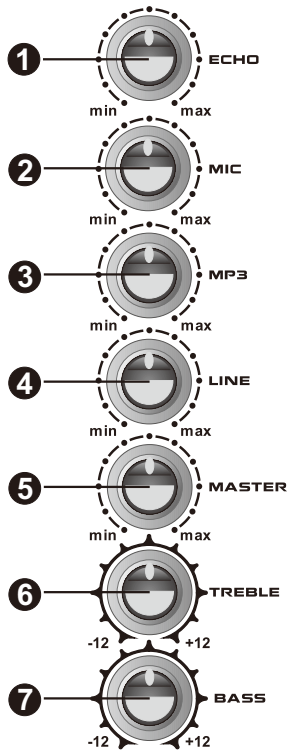


- 1.-Echo control
Level of effects signal control for wireless microphone and microphone.
- 2.-Microphone control
Use this control to set the volume level of the microphone.
- 3.-Mp3 control
Use this control to set the volume level of the mp3 player signal.
- 4.-Line input control
Use this control to set the volume level of the line signal.
- 5.-Master volume control
Set the general volume level.
- 6.-Treble
Use it to set the treble level.
- 7.-Bass
Use it to set the bass level.

WIRELESS MICROPHONE

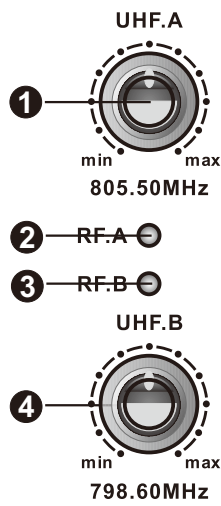


- 1.-UHF.A control
Use this control to set the volume level of the UHF.A signal.
- 2.-UHF.A indicator light.
- 3.-UHF.B indicator light.
- 4.-UHF.B control
Use this control to set the volume level of the UHF.B signal.

BOX SPEAKER CONNECT

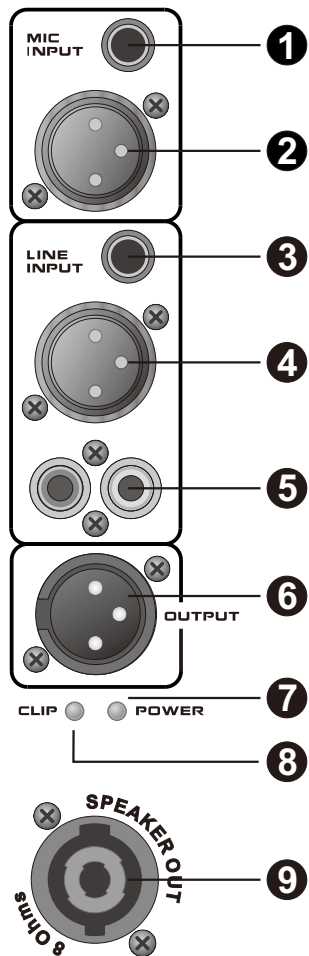

- 1.-Microphone input
Allow you to connect a microphone with a 6.35mm connector.
- 2.-Balanced microphone input
Connector for a balanced microphone.
- 3.-Line input 6.35mm jack
Allows you to connect an external audio device(CD,radio,DVD,etc.), with 6.35mm connectors.
- 4.-Line input cannon jack
Allows you to connect an external audio device(CD,radio,DVD,etc.),with connon connectors.
- 5.-Line input RCA jack
Allows you to connect an external audio device(CD,radio,DVD,etc.),with RCA connectors.
- 6.-Signal output
Use this jack to connect other amplifier using a connector.
- 7.-Power indicator.
- 8.-Overload indicator.
- 9.-external speaker minmum 8 ohm.

Mp3 PLAYER CONTROL

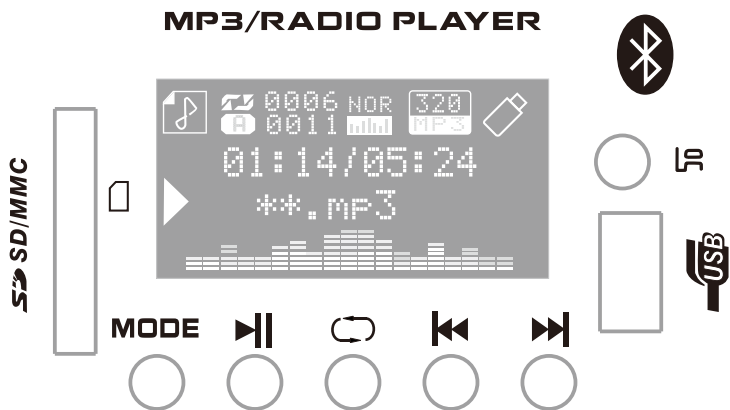

Button function	Button operation	USB	SD/MMC	FM RADIO
PLAY PAUSE ▶	Short press	Play/Pause	Play/Pause	Start automatic full FM radio band scan play this search to the first channel, if no channel, then it play 87.5MHz . save channels base on the actual radio station (up to 50)
	Long press	No Action	No Action	Play/Mute
PREV ◀◀	Short press	Previous song	Previous song	Previous radio channel
	Long press	Fast reverse play	Fast reverse play	Reverse scan the radio channel with step
NEXT ▶▶	Short press	Next song	Next song	Next radio channel
	Long press	Fast forward play	Fast forward play	Scan the radio channel with step
REPEAT ↺	Short press	Repeat mode: One/All/Random/Intro	Repeat mode: One/All/Random/Intro	No Action
MODE ⏻	Short press	Change the audio input,the order as follow:USB-SD-FM-BLUETOOTH		
	Long press	Power On/Power Off		