 


THANKS FOR USING

POWERED SPEAKER SYSTEM
USER'S MANUAL

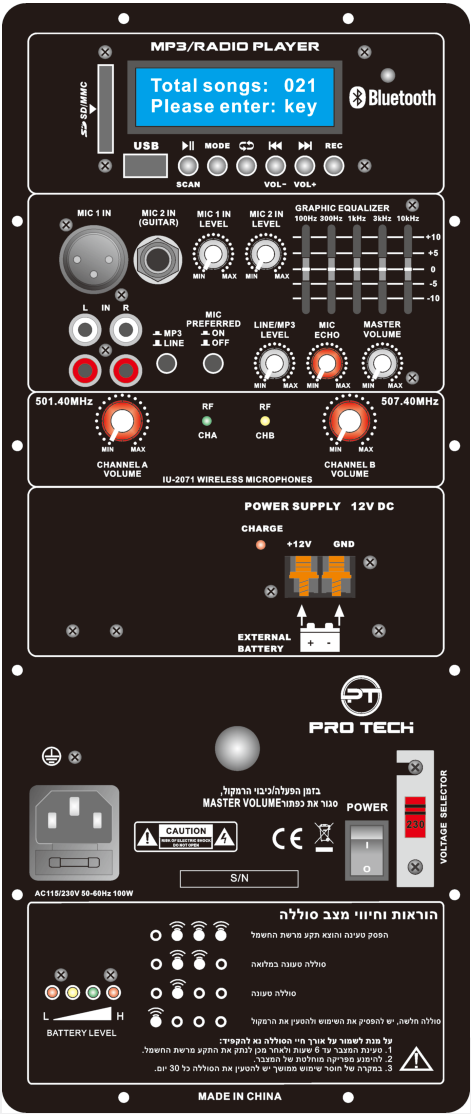

Before using your new 1000W Mp3 player speaker box with amplifier,please read this instruction manual to prevent any damage.Put it away in a safe for future references.

FEATURES

- Independent master volume for each input,treble and bass tonesetting.
- Polarized input plug.
- Balanced and non-balanced microphone input.
- Two different connectors for each microphone input:6.3mm female and Cannon.
- Two RCA and one Cannon input jacks as auxiliary.
- 6.3mm female connector and Cannon connector for output line,allowing you to connect more than one active speaker,offering a sound system according your needs.
- In-use and overload indicator.
- Power cord included in the package.

IMPORTANT

- Avoid exposing the loudspeakers to moisture. If they are set up outdoors, be sure they are under cover.
- Warranty is void if you open the case.
- If you open the case, you may cause malfuncations to it.

SPECIFICATION

Input: 115/230V 50-60Hz
Power output: 1000W P.M.P.O

Model Specifications	BM-712	BM-715
Configuration	2-Way	2-Way
Frequency Range (-10dB)	40Hz-20KHz	40Hz-20KHz
Power Capacity	200W rms	200W rms
Nominal Impedance	8 ohm	8 ohm
Sensitivity (1W / 1m)	96 dB	97dB
Connectors	XLR JACK RCA	XLR JACK RCA

Product design and specification are subject to change without previous notice.

WARNING

- In case you require a revision of the equipment, please contact an authorized dealer.
- Do not use or store the equipment near wet places.May cause malfunction or shock hazard.
- Avoid exposure to extreme cold.If you must operate the loudspeakers in a cold environment,warm up the voice coils slowly by sending a low-level signal through them for about 15 minutes.
- Clean only with a soft,dry cloth.
- If the power cord is broken,it must be replaced by the manufacturer or service agent or qualified personnel to avoid risks.

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment.
Since hearing damage from loud noise is often undetectable until it is too late.
We recommend you avoid prolonged exposure to excessive noise.
This list of sound levels is included for your protection.

Level	Example
30	Quiet library,soft whispers
40	Living room,refrigerator,bedroom away from traffic
50	Light traffic,normal conversation
60	Air conditioner at 20ft,sewing machine
70	Vacuum cleaner,hair dryer,noisy restaurant
80	Average city traffic,gabage disposals,alarm clock at 2ft

List the protection level of sound.

The following noises can be dangerous under constant exposure:


Level	Example
90	Subway.motorcycle,truck traffic,lawn mower
100	Garbage truck,chainsaw,pneumatics drill
120	Rock band concert in front of speakers
140	Gunshot blast,jet plane
180	Rocket launching pad

The power speaker is designed to sit on the floor,a tabletop,or to fit on a stand and tripod speaker stand.

Some recommendations are:
-Avoid placing the speaker in the corner of a room.This increases the low frequency output and can cause the sound to be muddy and indistinct.
-Avoid placing the speaker against a wall. This,too,increases the low frequency output,though not as much as corner placement.However,if you do need to reinforce the low frequencies,this is a good way to do it.



Do not place the microphone near to the speaker,may cause echo and damages on the equipment.
You can use the canon LINE OUT connectors to plug other amplifier.

 CONTROL PANEL

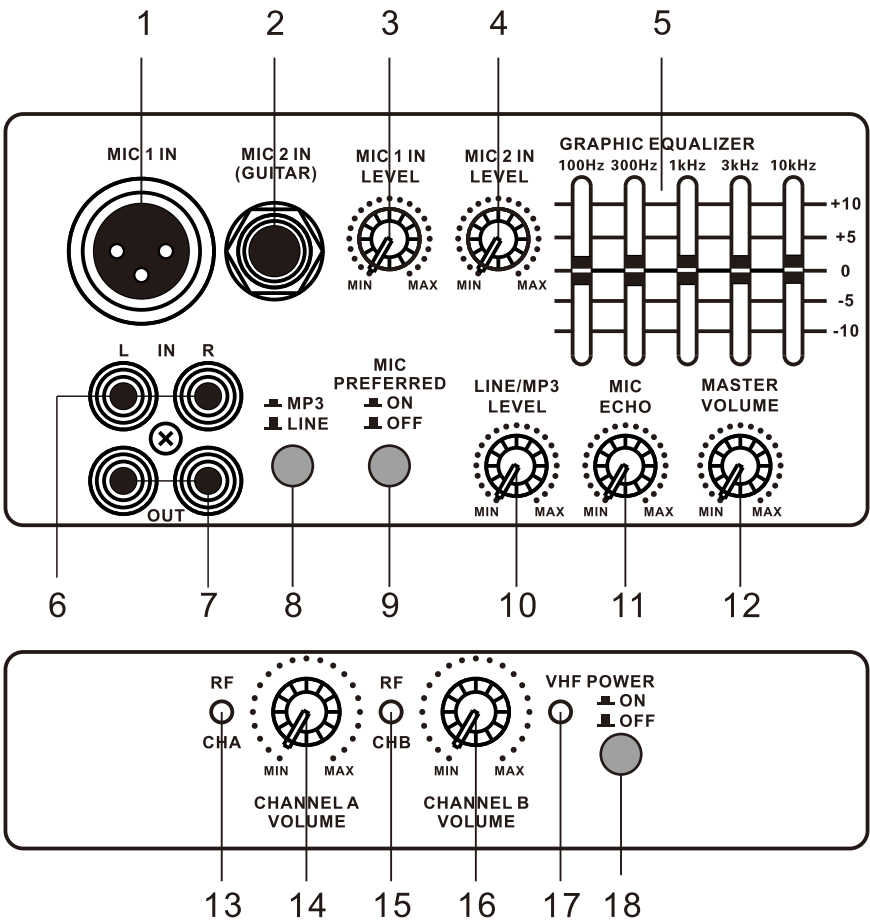


- 1. Microphone 1 input XLR jack
- 2. Microphone 2/guitar input 6.35 jack
- 3. Microphone 1 control
- 4. Microphone 2 control
- 5. Five band of equalizer.
- 6. Line in RCA jack
- 7. Line out RCA jack
- 8. Mp3/line in
- 9. Microphone preferred
- 10. Mp3/line in control
- 11. Echo control
- 12. Master volume control
- 13. Ch_A indicator light
- 14. Ch_A control
- 15. Ch_B indicator light
- 16. Ch_B control
- 17. VHF power light
- 18. VHF power switch

POWER CONTROL

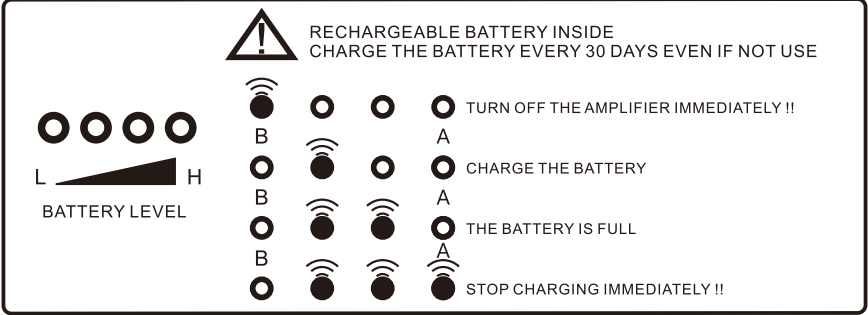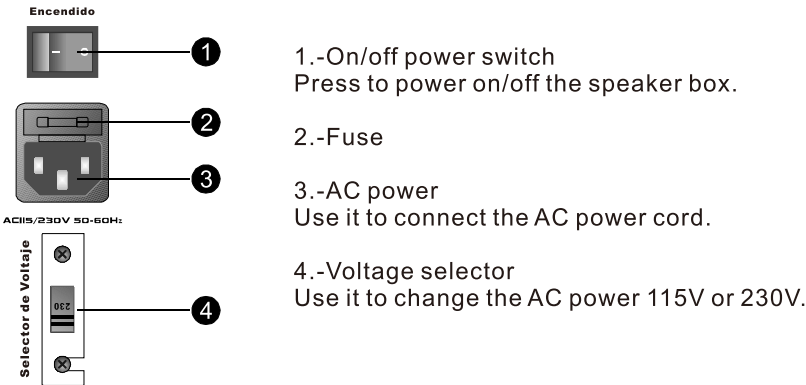


POWER SUPPLY

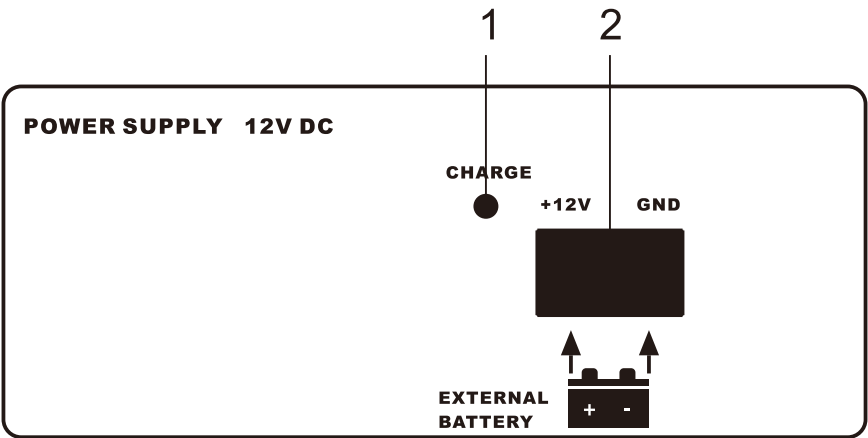

- 1. Charge indicator
- 2. External battery

 REMOTE CONTROL

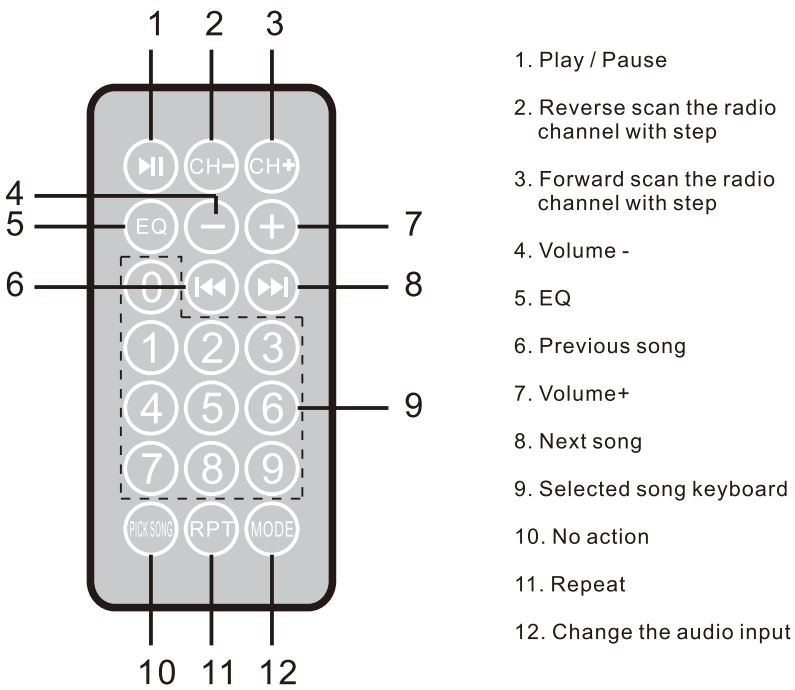

Mp3 PLAYER CONTROL

MP3/RADIO PLAYER

Total songs: 021
Please enter key

Bluetooth

USB, MODE, SCAN, VOL-, VOL+, REC

Button Function	Button Operation	USB	SD	Bluetooth	FM Radio	LINE IN
Play/Pause	Long press	/	/	/	Search	/
	Short press	Play/Pause	Play/Pause	Play/Pause	Play/Pause	Play/Pause
MODE	Long press	/	/	/	/	/
	Short press	Change the input mode				
Repeat	Long press	/	/	/	/	/
	Short press	Rpt mode	Rpt mode	/	/	/
Previous	Long press	Volume-	Volume-	Volume-	Volume-	Volume-
	Short press	Prev song	Prev song	Prev song	Prev song	/
Next	Long press	Volume+	Volume+	Volume+	Volume+	Volume+
	Short press	Next song	Next song	Next song	Next song	/
REC	Long press	/	/	/	/	/
	Short press	Recording	Recording	/	/	/

Pairing Two Speaker box using Bluetooth TWS.

- 1- Complete the pairing of your first speaker box to your pairing device.
- 2- Turn on second speaker box, press on the mode button for three to five seconds and the second one will find and pair to the first one.
- 3- Please make sure that the two speaker are within 5 feet of each other during this initial pairing.